

002260" 97E89960

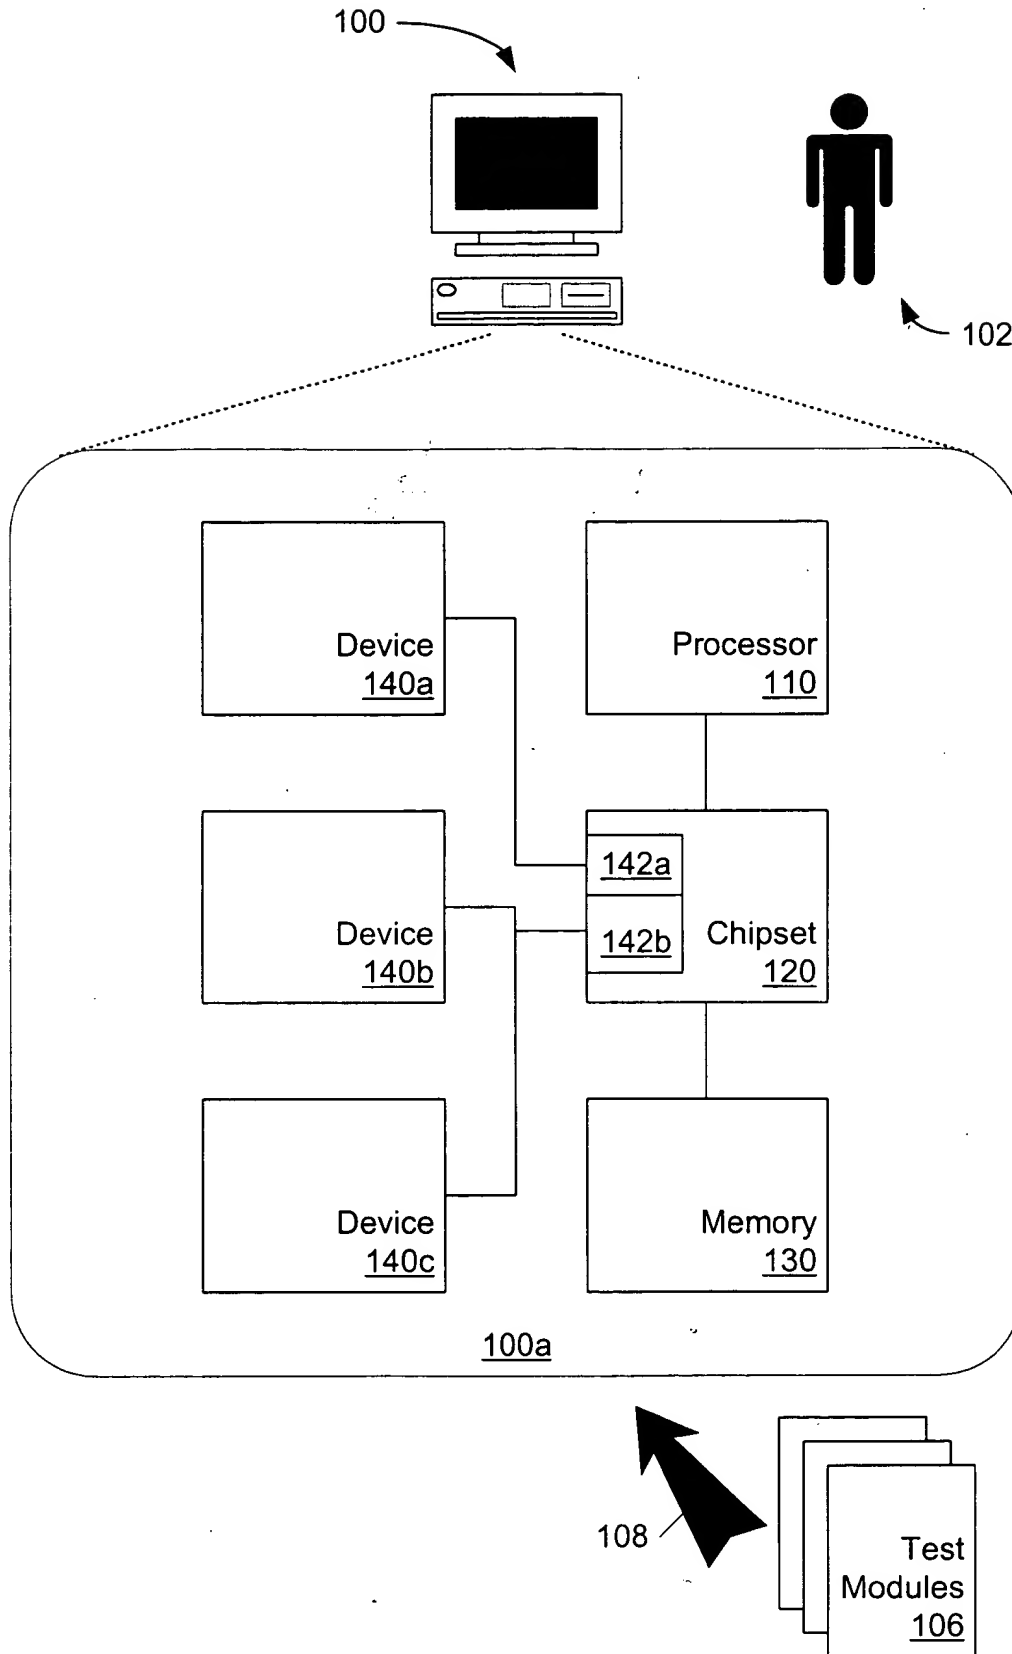


Fig. 1

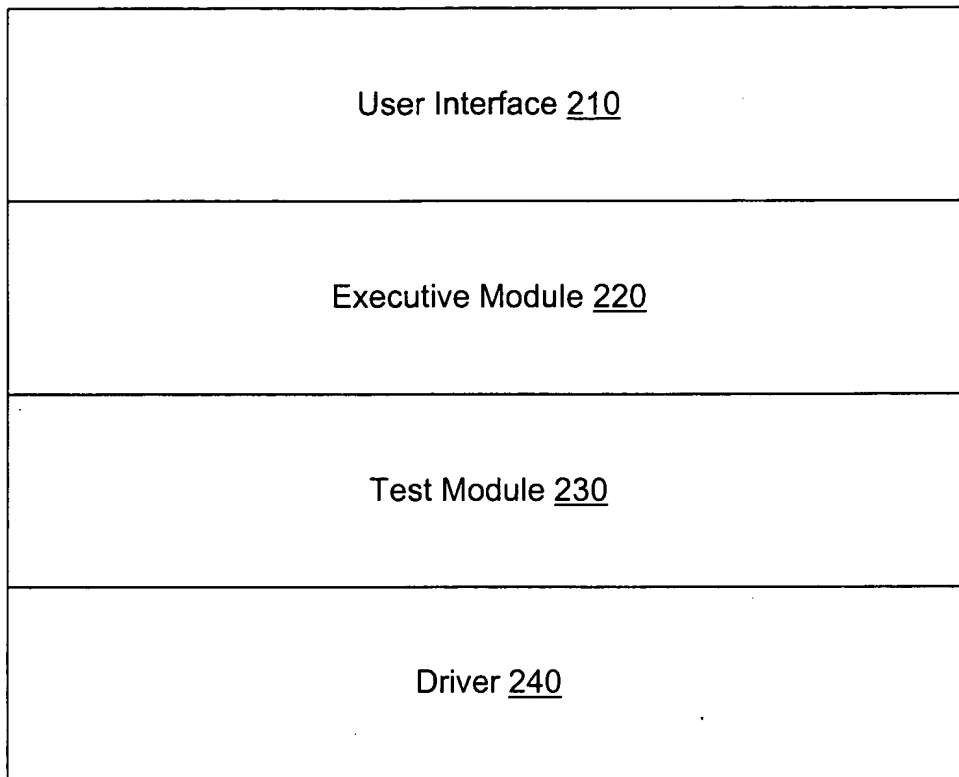
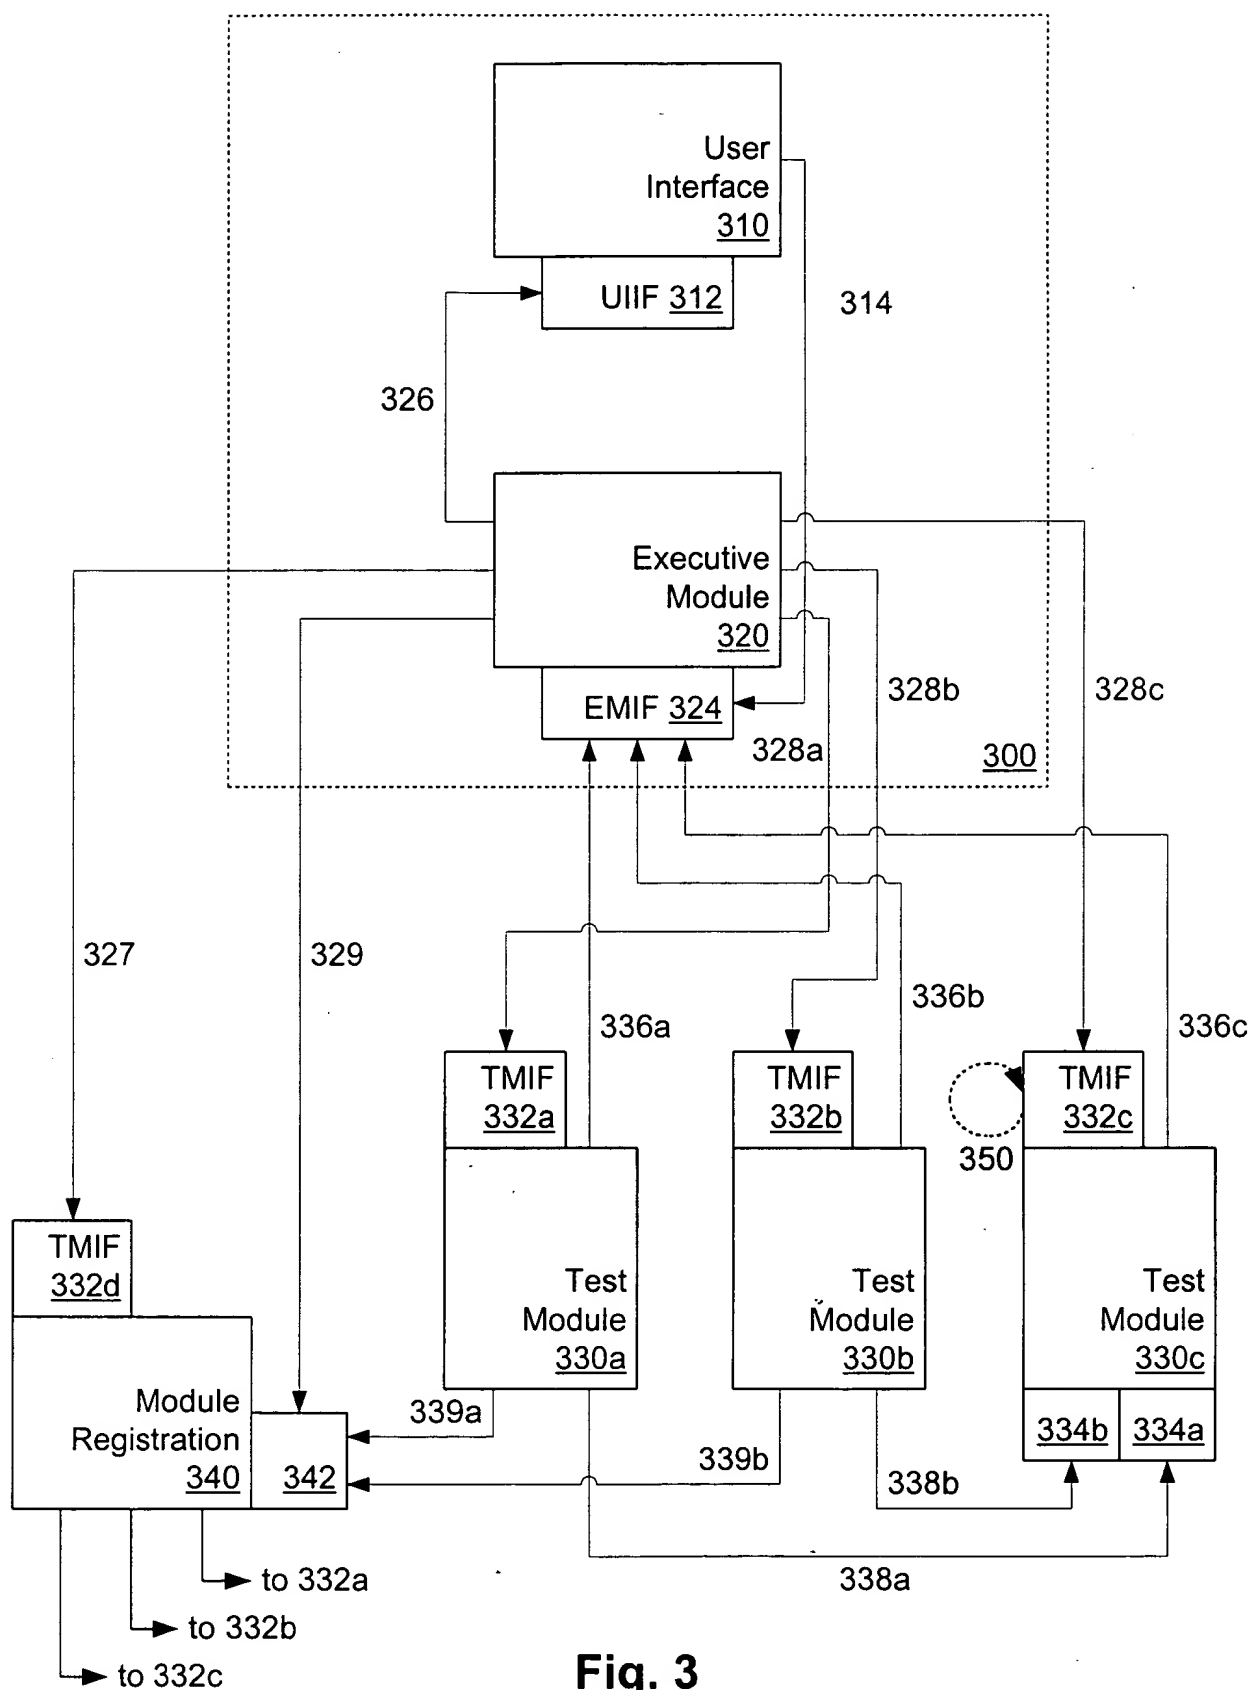


Fig. 2

002260" STE3950

002260" 97E3950

**Fig. 3**

402 404 406

Module ID	Pointer	Function
▪ ▪ ▪	▪ ▪ ▪	▪ ▪ ▪

408

400 **Fig. 4a**

Executive Module 320 ID	TMIF 332a Pointer	fQuitUsing
Executive Module 320 ID	TMIF 332b Pointer	fQuitUsing
Executive Module 320 ID	TMIF 332c Pointer	fQuitUsing
Test Module 330a ID	TMIF 332c Pointer	fQuitUsing
Test Module 330b ID	TMIF 332c Pointer	fQuitUsing

422
424
426
428
430

400 **Fig. 4b**

Executive Module 320 ID	TMIF 332a Pointer	fQuitUsing	422
Executive Module 320 ID	TMIF 332b Pointer	fQuitUsing	424
Executive Module 320 ID	TMIF 332c Pointer	fQuitUsing	426
Test Module 330a ID	TMIF 332c Pointer	fQuitUsing	428
Test Module 330b ID	TMIF 332c Pointer	fQuitUsing	430

400 ↗

Fig. 4c

Executive Module 320 ID	TMIF 332a Pointer	fQuitUsing	422
Executive Module 320 ID	TMIF 332b Pointer	fQuitUsing	424

400 ↗

Fig. 4d

002260 " 092200

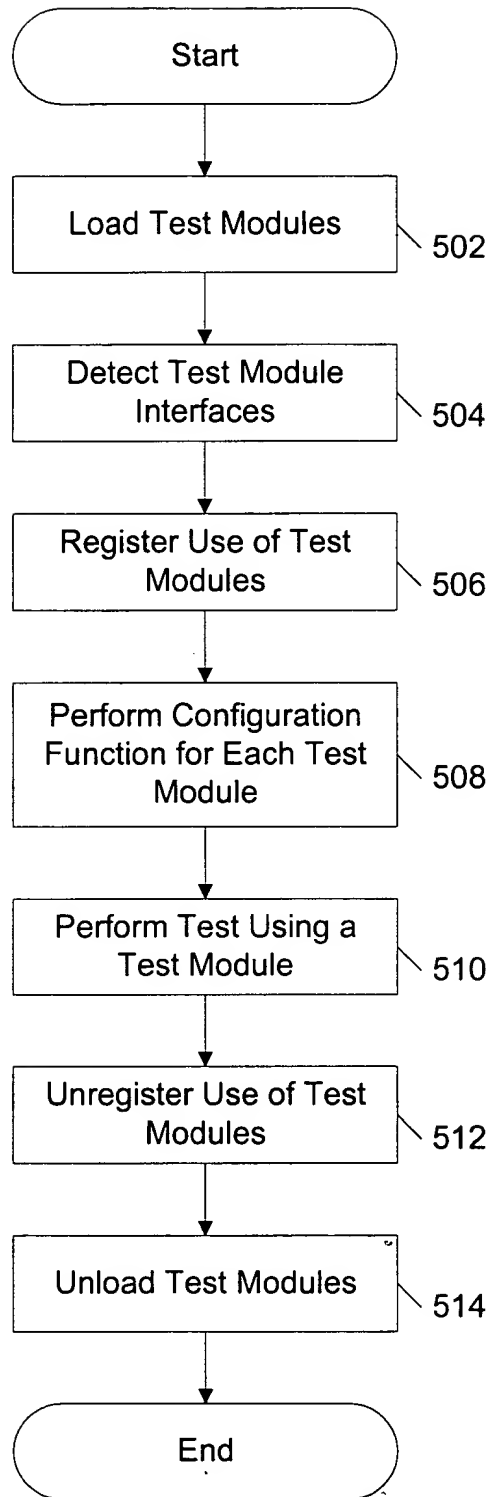
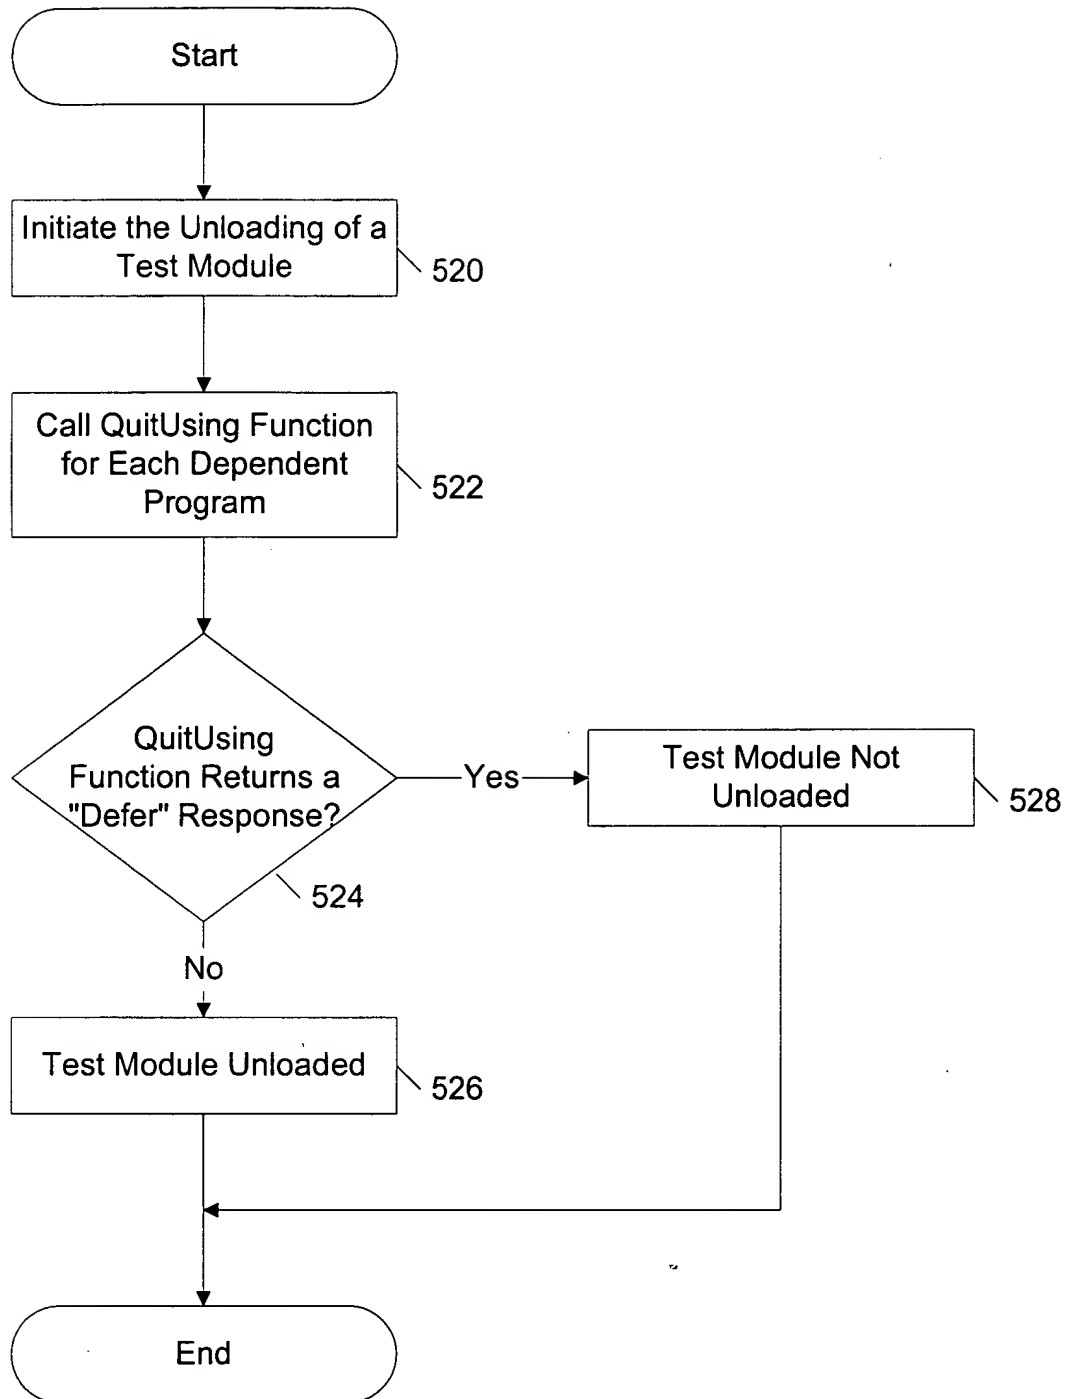
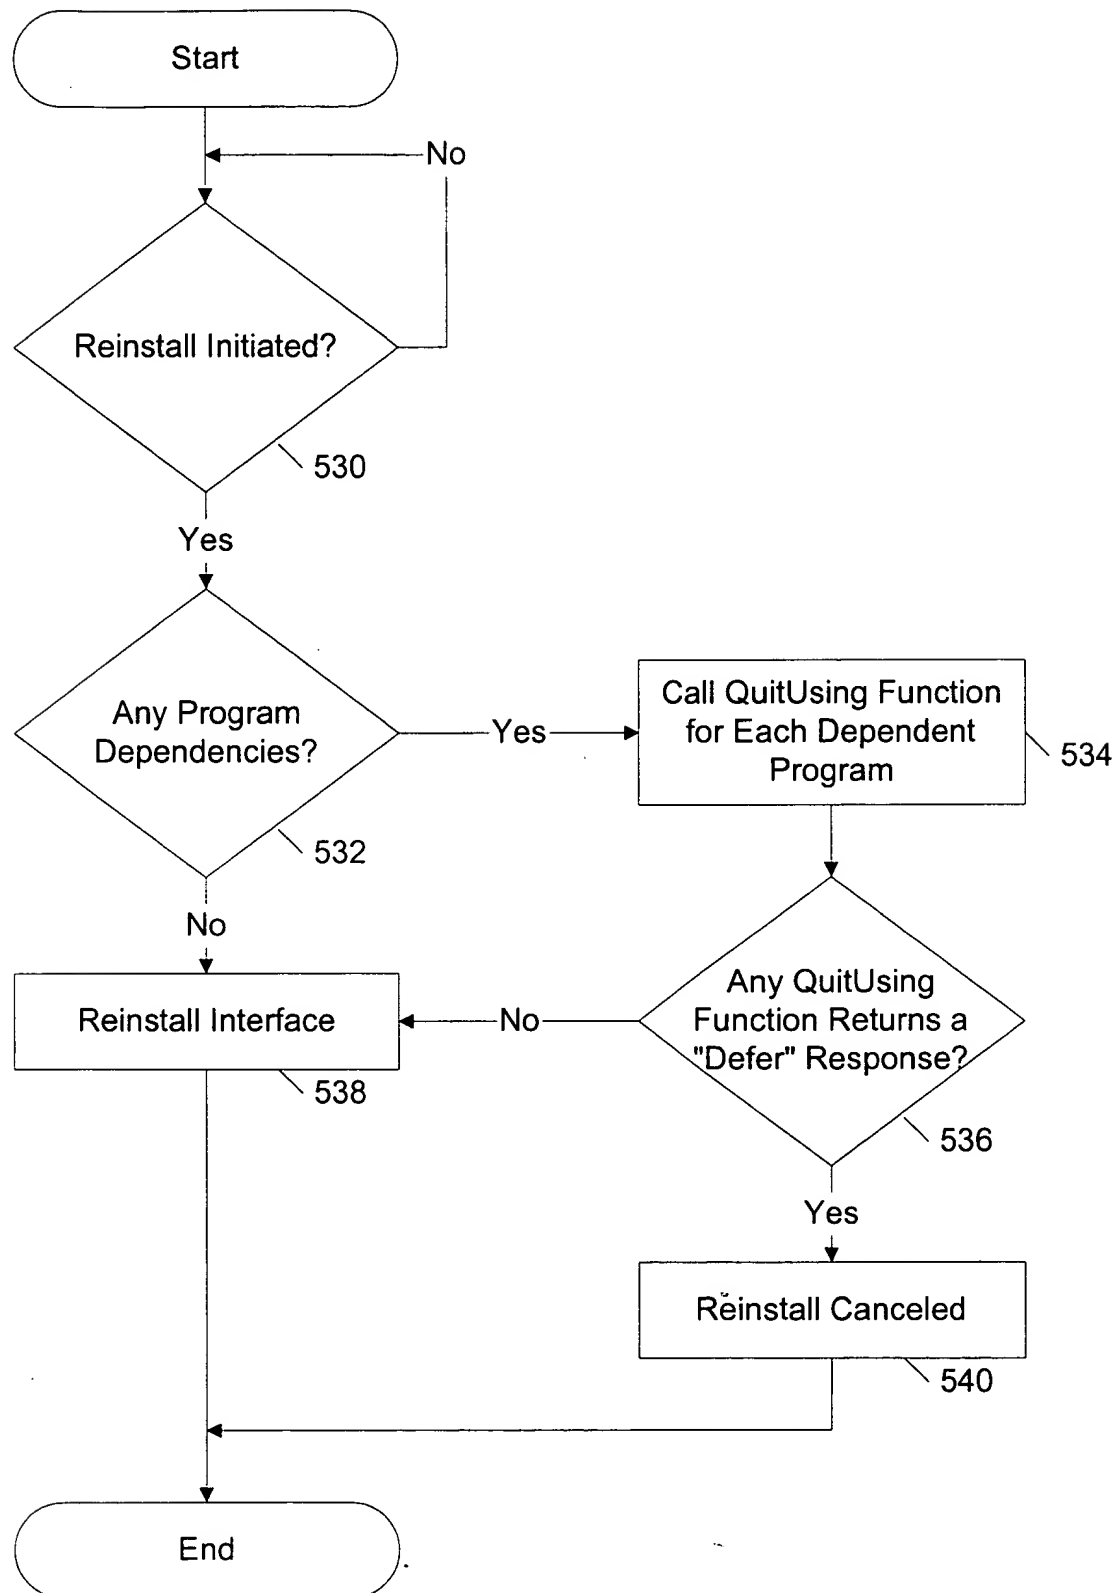


Fig. 5a

002260 " 9TE8960

**Fig. 5b**

**Fig. 5c**

002260" STE9960

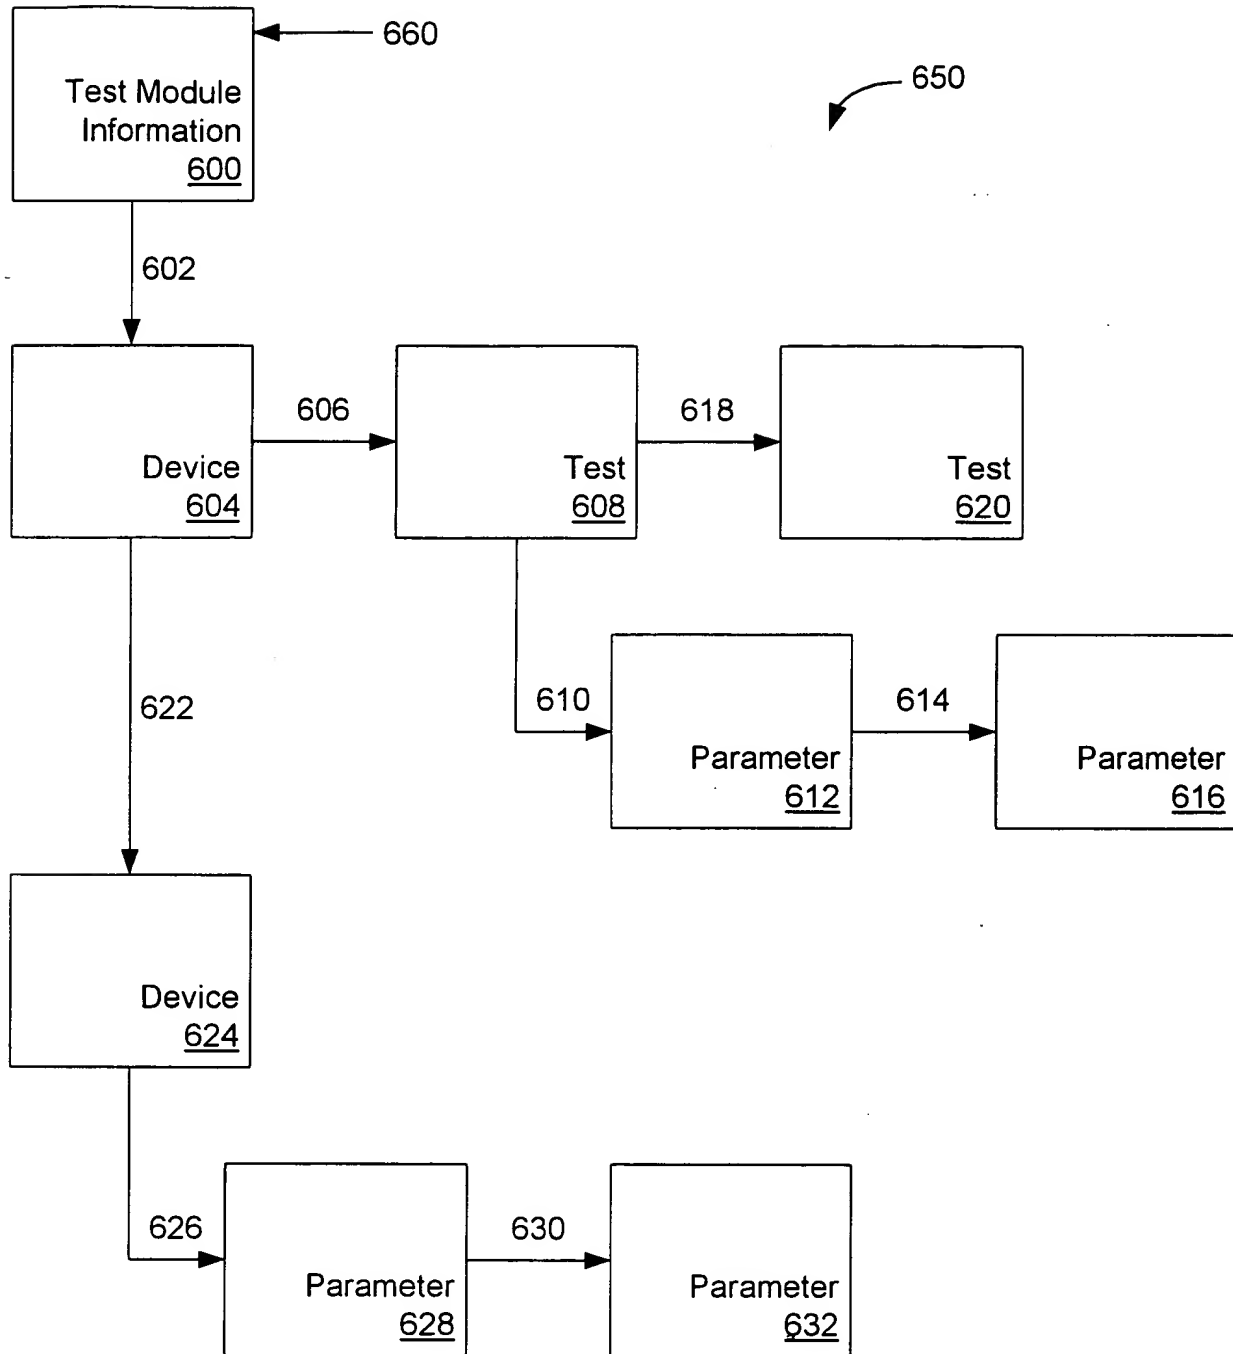


Fig. 6